

Product	Item no	RRP	Maint & sup.
Topocad reader , TOP viewer and communication towards instrument and calculation of survey data. Import of files, export of some file formats.	TM-00	FREWARE	
Topocad reader PLUS , Topocad reader as above and possibility to import and export DWG/DXF (06)	TM-06	99	20
Topocad engineer , foundation CAD, the most of Topocad's CAD engine, communication towards instrument, calculation of survey data, import/export of files. (07)	TM-07	599	120
Base module . Complete CAD, communication towards total stations, levellers, GPS instrument. Dimensioning, transformation, code table, terrain modeling, contour lines, road lining, export/import to a number of file formats, LandXML, built-in 3D viewer (08)	TM-08	1 590	318
<i>Calculation modules for road, sewer, railway, pipe and volumes</i>			
Profile profile form, interpretation and editing of profile, heights on road lines, surface check (02) Requires Base module.	TM-02	795	159
Volume model , volume calculation between two terrain models, between excavation bottom and two terrain models (03) Requires Base module.	TM-03	795	159
Volume cross section , section templates, calculation of cross sections, editing of cross sections with interactive volume calculation, export to DTM, export to 3D lines and sections in a drawing, export to LandXML for machine control. (01) Requires Base module and Profile.	TM-01	1 590	318
Tunnel , calculation of tunnel terrain models, tunnel section templates and tunnel cross sections. (05) Requires Profile.	TM-05	795	159
Railway , calculation for cant, slew/lift, overlap measurement, use of length tables, report of exchange points (15) Requires Profile.	TM-15	149	30
<i>Calculation module for net adjustment</i>			
Net adjustment calculation of networks, simulation of net, error reports, search for gross errors, export to drawing and to PP file. (04) Requires Base module.	TM-04	990	198
<i>Modules for map and databases</i>			
Database adapter ISM , reads and writes to Oracle Spatial database via ISM from Spatial technology (14) Requires Base module.	TM-14	1 195	239
Database adapter ArcGIS , reads and writes to ArcSDE and the personal geo database via ArcGIS client (17) Requires Base module.	TM-17	1 195	239
Database adapter FDO , reads and writes to a number of databases via the open source FDO database connection (18) Requires Base module.	TM-18	1 195	239
<i>Other modules</i>			
Macro module , the macro module gives the possibility to use complex commands, created by you (20). Requires Base module.	TM-20	99	20
Civil planning module , macro module and usage of properties direct to objects in the drawing and a special way to handle legends (16) Requires Base module.	TM-16	795	159
Topocad Field survey for survey and stake out of data direct to/from the drawing with connection to a GPS instrument using NMEA 0183, you navigate in the drawing (11) Requires Engineer or Base module.	TM-11	395	79

VAT number SE556476681301

Prices excluding VAT.

Numbers within parenthesis is the number of the mod in the license certificate of Topocad.

Chaos systems AB

Solna strandväg 14, 6tr | S-171 54 SOLNA | SWEDEN
Tel. +46 8 410 415 00 | Support +46 829 06 60 | Fax. +46 829 06 66

E-mail: info@chaos.se <http://www.chaos.se>

Product	Item no	RRP	Maint & sup.
Topocad Packages (compound modules)			
Topocad Field Engineer Bring Topocad to field and survey using your GPS. Navigate, survey and stake out directly to/from your drawing. (Field module + Engineer) (07 11)	TP0711	749	199
Topocad Field Base Bring Topocad to field and survey using your GPS. Navigate, survey and stake out directly to/from your drawing. Edit the drawing with the full CAD and use roadlines as references. (Field module + Base module) (08 11)	TP0811	1 659	397
Volume package (Base module + Volume model module) (08 03)	TP0308	1 995	477
Earthworks package (Base module + Profile, Volume model module plus terrain cross sections (not design cross sections or section template)) (08 02 03 09)	TP02030809	3 189	795
Design package (Base module+ Profile + Volume model + Design) (08 02 03 01)	TP01020308	3 899	954
Package Base + Arc adapter (Base modul + ArcGIS adapter) (08 17)	TP0817	2 229	557
Package Base + ISM adapter (Base module + ISM Adapter) (08 14)	TP0814	2 229	557
Package Base + FDO adapter (Base module + FDO Adapter) (08 18)	TP0818	2 229	557

Upgrades

Topocad 9.0 -> current maintenance agreement, price is 80 % of the total product value

Topocad 10.0 -> current maintenance agreement, price is 50 % of the total product value

Topocad 11.0 -> current maintenance agreement, price is 30 % of the total product value

Volume discounts

0-4 licenses	0%
5-9 licenses	15%
10-19 licenses	20%
20-34 licenses	25%
35-49 licenses	30%
50-74 licenses	35%
75-99 licenses	40%
100-149 licenses	45%

The volume discount is calculated of total amount of owned Topocad licenses after purchase and is calculated per module.

Netware license and hardware locks

Netware license with concurrent users instead of single licenses, add 30% of the price.

Item no TMN resp. TPN

Hardware lock (optional instead of hard disc lock)	T-USBDON	99	0
--	----------	----	---

Miscellaneous

Transfer of license ownership (with permission from both companies)	XTRANS	299	0
---	--------	-----	---

Maintenance and support agreements covers all updates and mail- and telephone support during one year.

Maintenance and support agreement is invoiced in April for licenses purchased April - September and in October for licenses purchased in October - March. Maintenance and support agreement is default at purchase.

VAT number SE556476681301

Prices excluding VAT.

Numbers within parenthesis is the number of the mod in the license certificate of Topocad.

Chaos systems AB

Solna strandväg 14, 6tr | S-171 54 SOLNA | SWEDEN

Tel. +46 8 410 415 00 | Support +46 829 06 60 | Fax. +46 829 06 66

E-mail: info@chaos.se <http://www.chaos.se>